


## 9.4 Performing maintenance works



IMPORTANT

### 9.4.1 Lubricating the guide rails

The guide rails are to be lubricated with multi-purpose grease on both sides daily.

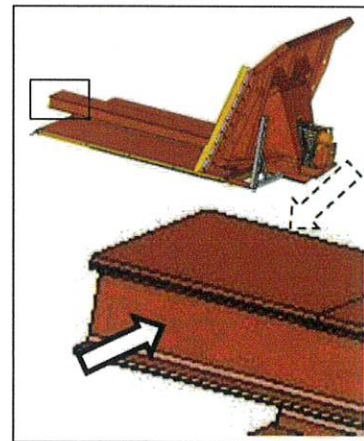


### 9.4.2 Adjusting the guide rails

The guide rails are to be checked and adjusted every 40 hours of operation.

*Approach:* Flexible sensor strips with **1mm** thickness required.

Screw the set screw in until the sensor plate is clamped by loosening the counter nuts and inserting the 1mm flexible sensor strips, tighten the counter nut. Continue this for the whole length of the wall guide, on both sides.

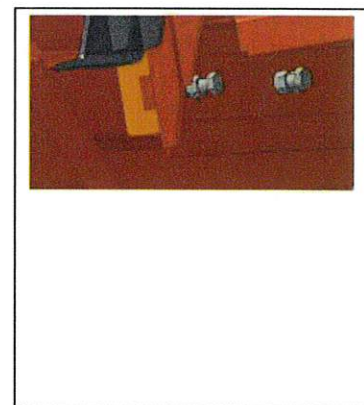

### 9.4.3 Adjusting the wipers

The wipers on both sides are to be checked for wear daily or readjusted by tightening the disc sprung screws.

Maximum distance is 1 mm.

